


BONN COLLECTION


DEEP ROBE HOOK 238130D

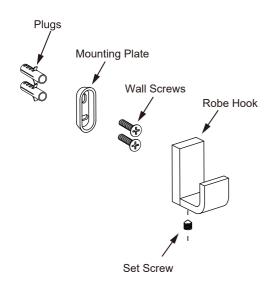

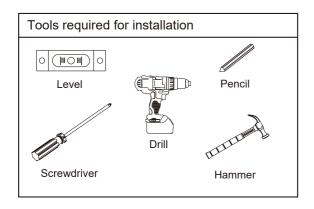


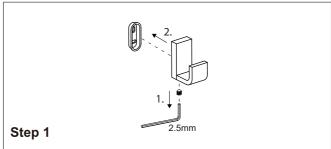


Loosen the set screw on the accessory and remove the backing plate. Position the accessory against the wall and mark outline with pencil.

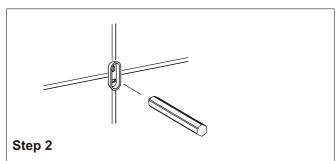

Position the backing plate flat side down on the wall and mark holes with pencil.

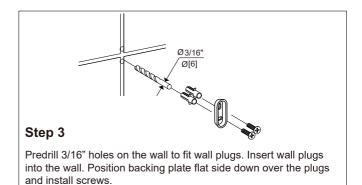

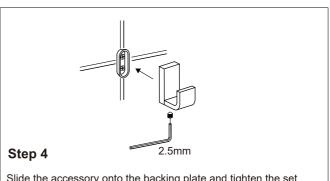

Slide the accessory onto the backing plate and tighten the set screw using Allen key provided.