

# INSTALLATION INSTRUCTIONS

Item#4878-283 (New. 05/ 10/ 2014)

## READ AND SAVE THESE INSTRUCTIONS

**WARNING! SHUT POWER OFF AT FUSE OR CIRCUIT BREAKER .**  
**AVERTISSEMENT! COUPER LE COURANT AU NIVEAU DES FUSIBLES OU DU DISJONCTEUR.**

### ASSEMBLING THE FIXTURE (Fig.2)

1. Shut off the power at the fuse box or circuit breaker. If necessary, remove the existing fixture and its mounting hardware from the ceiling.
2. Carefully remove the new fixture from the carton and check that all parts are included as shown in the illustration.
3. Remove the screw (B), and remove the outer frame (J).
4. Insert the front glass (D) and side glass (E) into the outer frame (J) then secure the glass with clips (F).
5. Place the fixture body (C) into the outer frame (J), and secure with screws (B).
6. Install the light bulbs (not included) in accordance with the fixture's specifications: **DO NOT EXCEED THE MAXIMUM WATTAGE RATING! (NE PAS DEPASSER LA PUISSANCE NOMINALE MAXIMALE!)**

### MOUNTING THE FIXTURE (Fig.1)

7. Thread one end of nipple into the crossbar until snug.
8. Place lock washer and hex nut over end of nipple protruding through crossbar, then thread hex nut until tight.
9. Take this crossbar assembly and mount to the ceiling outlet box using the mounting screws (Size: #8-32N\*L0.5"). The side of the crossbar marked "GND" must face out.
10. Open the quick links and connect to the fixture loops (A). Then close the quick link.
11. By measuring, determine the correct number of links needed on each chain for the desired hanging height. Using the chain pliers disconnect and discard the excess chain.
12. Carefully lace the fixture wires through the chain.
13. Open the other quick links to connect the other end links of the chains to the ceiling loops on the canopy. Then close the quick links.
14. Feed the fixture wires through the ceiling loop and canopy and pull tight.

### CONNECTING THE WIRES (Fig.3)

15. Raise the fixture to the ceiling and hook the safety cable onto the crossbar.
16. Connect the electrical wires as shown in figure 3, making sure that all wire connectors are secured. If your outlet box has a ground wire (green or bare copper), connect the fixture's ground wire to it. Otherwise, connect the fixture's ground wire directly to the circular strap using the green screw provided. After wires are connected, tuck them carefully into the ceiling junction box.

### FINISHING THE INSTALLATION (Fig. 1)

17. Place the canopy onto the nipple and secure it with the finial.


Your installation is now complete. Return power to the junction box and test the fixture.

**Note: Illustration (Fig.1) (Fig.2) on this manual is for installation purposes only. It may or may not be identical to the fixture purchased.**

### CHAIN HUNG FIXTURE INSTRUCTION


Notice: It is important to use proper chain pliers (not included) To OPEN and CLOSE the chain included with this fixture. Do not open them with other tools that may twist or stress the chain links. It is important to use proper chain pliers like the ones shown in the diagram.

Fig.1

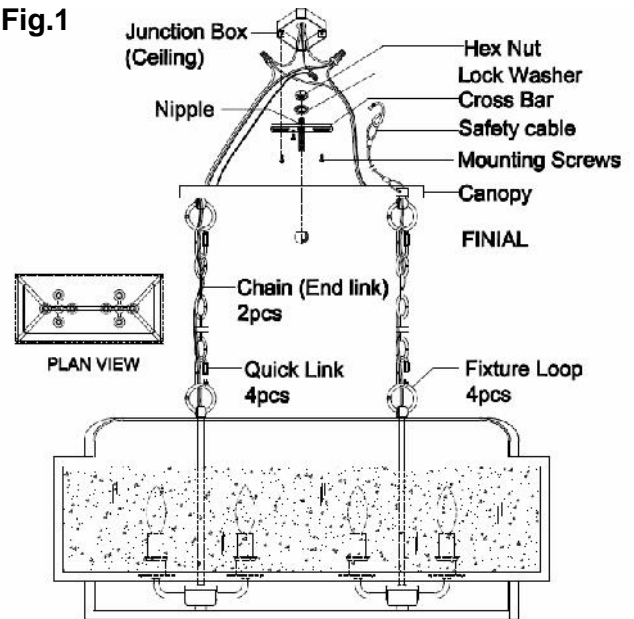

Set# A-014  
 - Crossbar  
 - Ground Screw  
 - Mounting Screw\*2

Fig.2

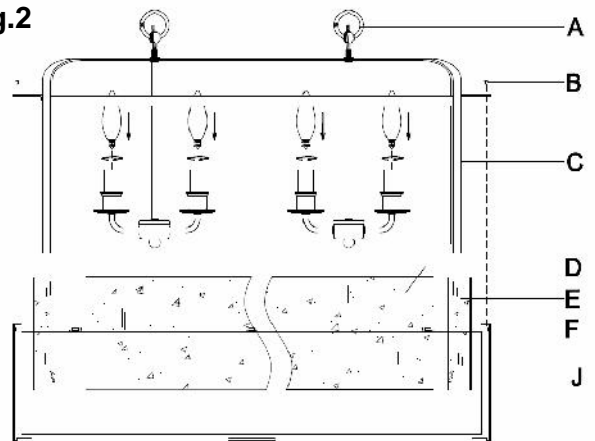

Chain # HCH2072-283  
 Gauge D3.8mm

Fig.3

