INSTALLATION INSTRUCTIONS FOR FIXTURE#4962

ASSEMBLING THE FIXTURE (FIG. 1)

1. Shut off the power supply at the fuse box or circuit breaker. If necessary, remove the old fixture from the ceiling, including the existing mounting hardware.
2. Carefully remove the new fixture from the carton and check that all parts are included as shown in the illustration.
3. Adjust the arms to its desired position;
4. Thread the nipple (H) into the bottom center hole of the socket cluster and secure with hex nut.
5. Thread the hex nut (I) onto the other end of the nipple (H).
6. Place 1pc flat washer (J), 1pc flat washer (J), glass shade (G), 1pc plastic washer (K), steel washer (M) over the nipple (H) in that order, then secure with hex nut (N).
7. Attach the cap (O) over the nipple (H), then secure with finial (P).
8. Install the bulbs in accordance with the fixture's specifications. **(DO NOT EXCEED THE MAXIMUM WATTAGE RATING!) (NE PAS DEPASSER LA PUISSANCE NOMINALE MAXIMALE!).**

MOUNTING THE FIXTURE

9. Attach the cross bar (B) to the outlet box using the outlet box screws (A). The side of the cross bar marked "GND" must face out.
10. Follow the wiring instructions carefully (See Fig.2).
11. Attach the fixture main body onto outlet box by protruding mounting screws(C) through mounting holes on the canopy (D) and secure with ball nut (E).

CONNECTING THE WIRES (FIG .2)

1. At this point, connect the electrical wires as shown in Fig. 2, making sure that all wire connectors are secured. If your outlet box has a ground wire (green or bare copper), connect the fixture's ground wire to it. Otherwise, connect the fixture's ground wire directly to the mounting plate using the green screw provided. After wires are connected, tuck them carefully inside the Junction Box.

Your installation is now complete. Return power to the outlet box and test the fixture.
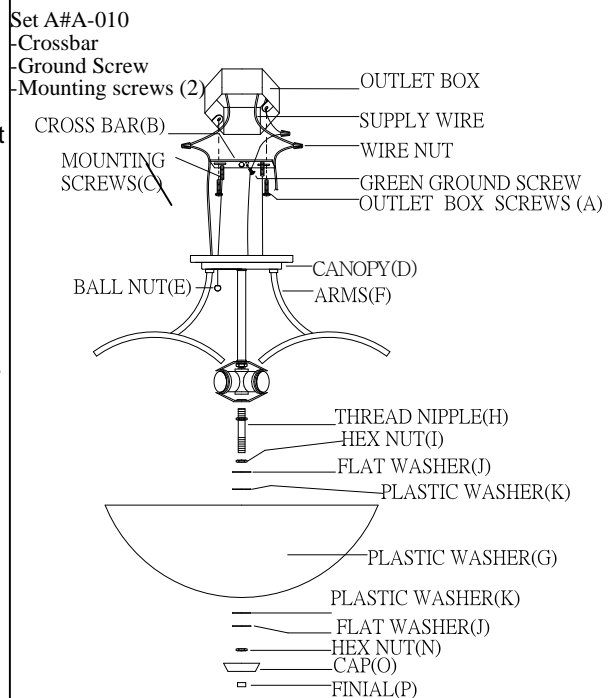

Fig.1

Set A#A-010
-Crossbar
-Ground Screw
-Mounting screws (2)

OUTLET BOX
SUPPLY WIRE
CROSS BAR(B)
WIRE NUT
MOUNTING SCREWS(C)
GREEN GROUND SCREW
OUTLET BOX SCREWS (A)
CANOPY(D)
BALL NUT(E)
ARMS(F)
THREAD NIPPLE(H)
HEX NUT(I)
FLAT WASHER(J)
PLASTIC WASHER(K)
PLASTIC WASHER(G)
PLASTIC WASHER(K)
FLAT WASHER(J)
HEX NUT(N)
CAP(O)
FINIAL(P)

Fig .2

FIXTURE WIRES Black or Smooth	FIXTURE WIRES White or Ribbed	FIXTURE WIRES Bare Copper (Ground)
HOUSE WIRES Black (Hot)	HOUSE WIRES White (Neutral)	HOUSE WIRES Green (Ground)