




NOTE: ORIENTATION OF CANOPY IS CRITICAL TO GLASS DROP DESIGN

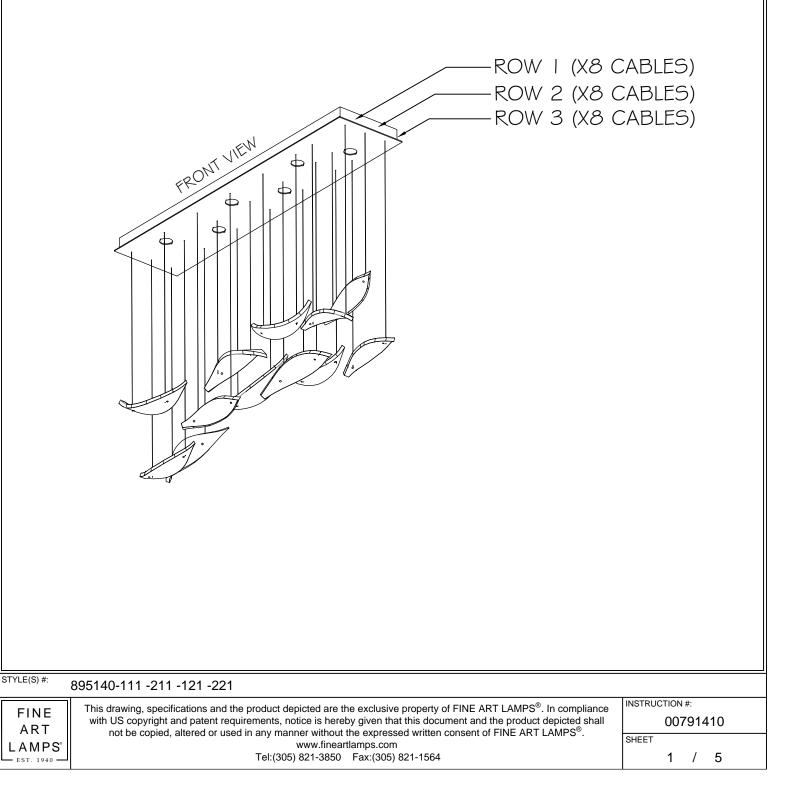


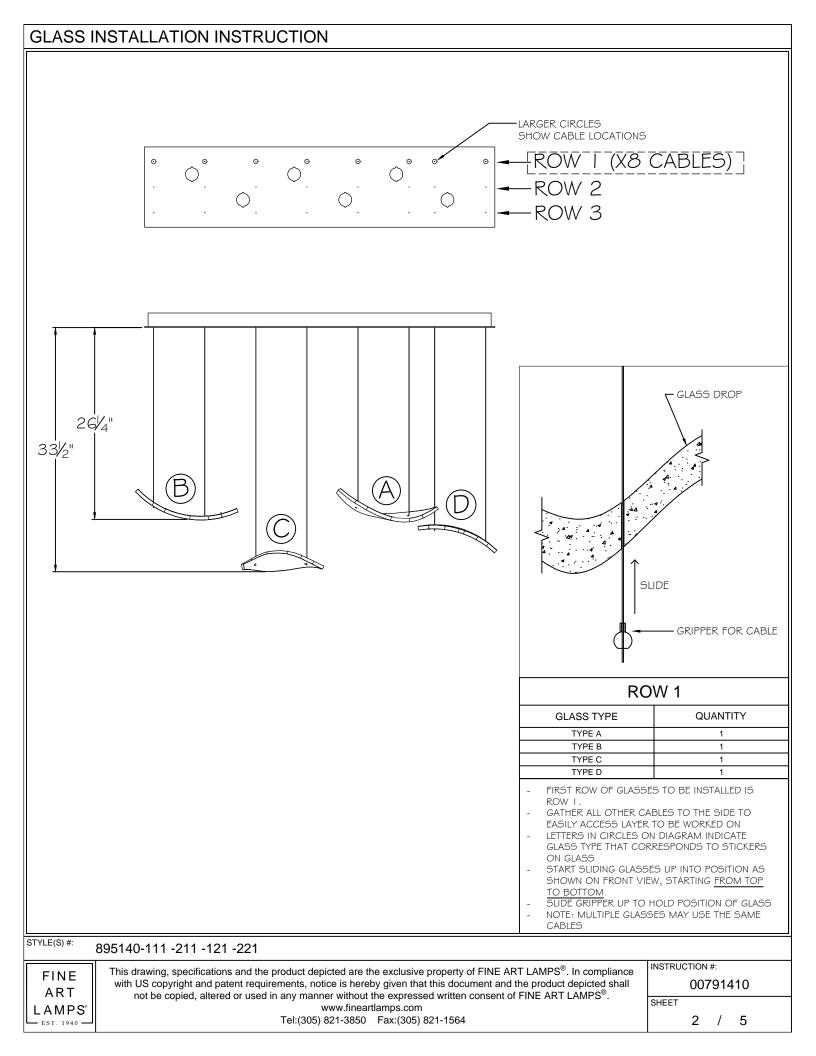

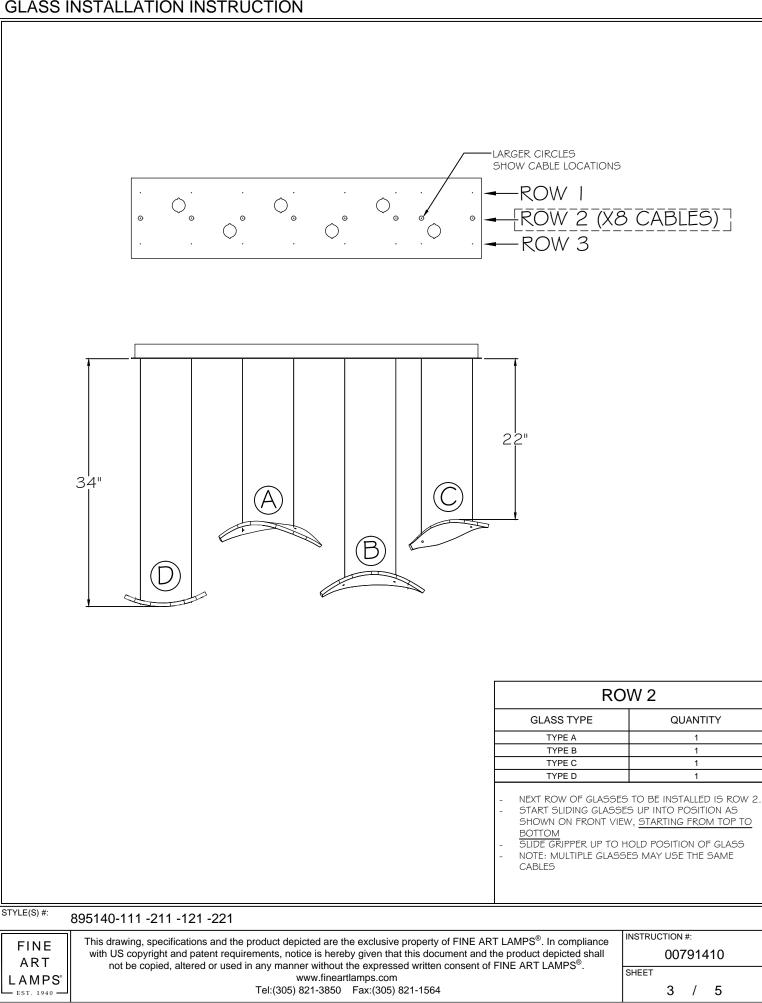




GLASS INSTALLATION INSTRUCTION

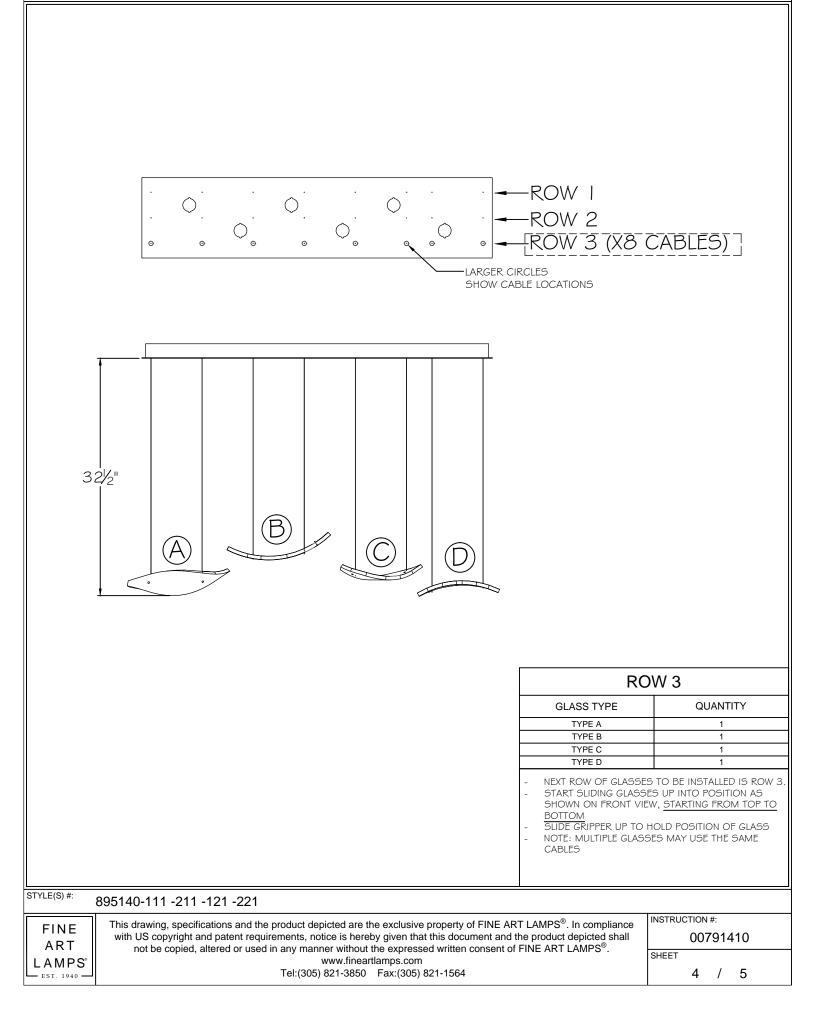

GLASS INSTALLATION INSTRUCTION

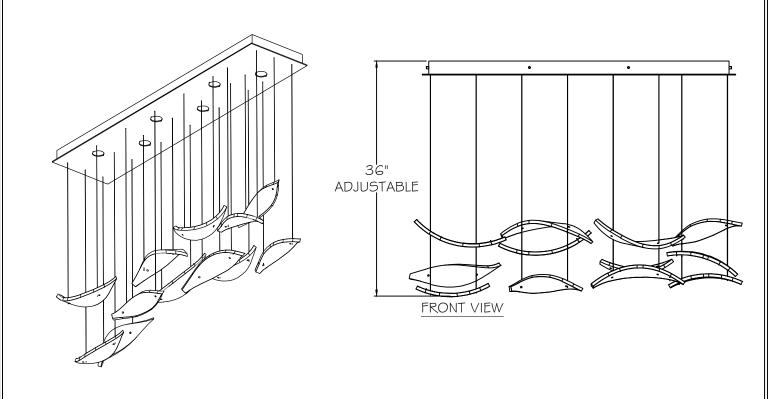

- ONCE ALL GLASSES ARE INSTALLED AND FINAL GLASS POSITION IS ACHIEVED, ENSURE TO CUT EXCESS CABLES UP TO HARDWARE OF LOWEST GLASSES

!:	895140-111	-211	-121	-221
	000140 111	~ ' '	121	~~ '

This drawing, specifications and the product depicted are the exclusive property of FINE ART LAMPS[®]. In compliance with US copyright and patent requirements, notice is hereby given that this document and the product depicted shall not be copied, altered or used in any manner without the expressed written consent of FINE ART LAMPS[®]. www.fineartlamps.com

INSTRUCTION #:						
00791410						
SHEET						
	5	/	5			

Tel:(305) 821-3850 Fax:(305) 821-1564

STYLE(S) #

FINE ART LAMPS[®] est. 1940

NOTE: ORIENTATION OF CANOPY IS CRITICAL TO GLASS DROP DESIGN

