




PRODUCT NAME: Axiom 1-Light Pendant
NUMBER: 10080

Please consult your electrician for Hang fixture and wiring.

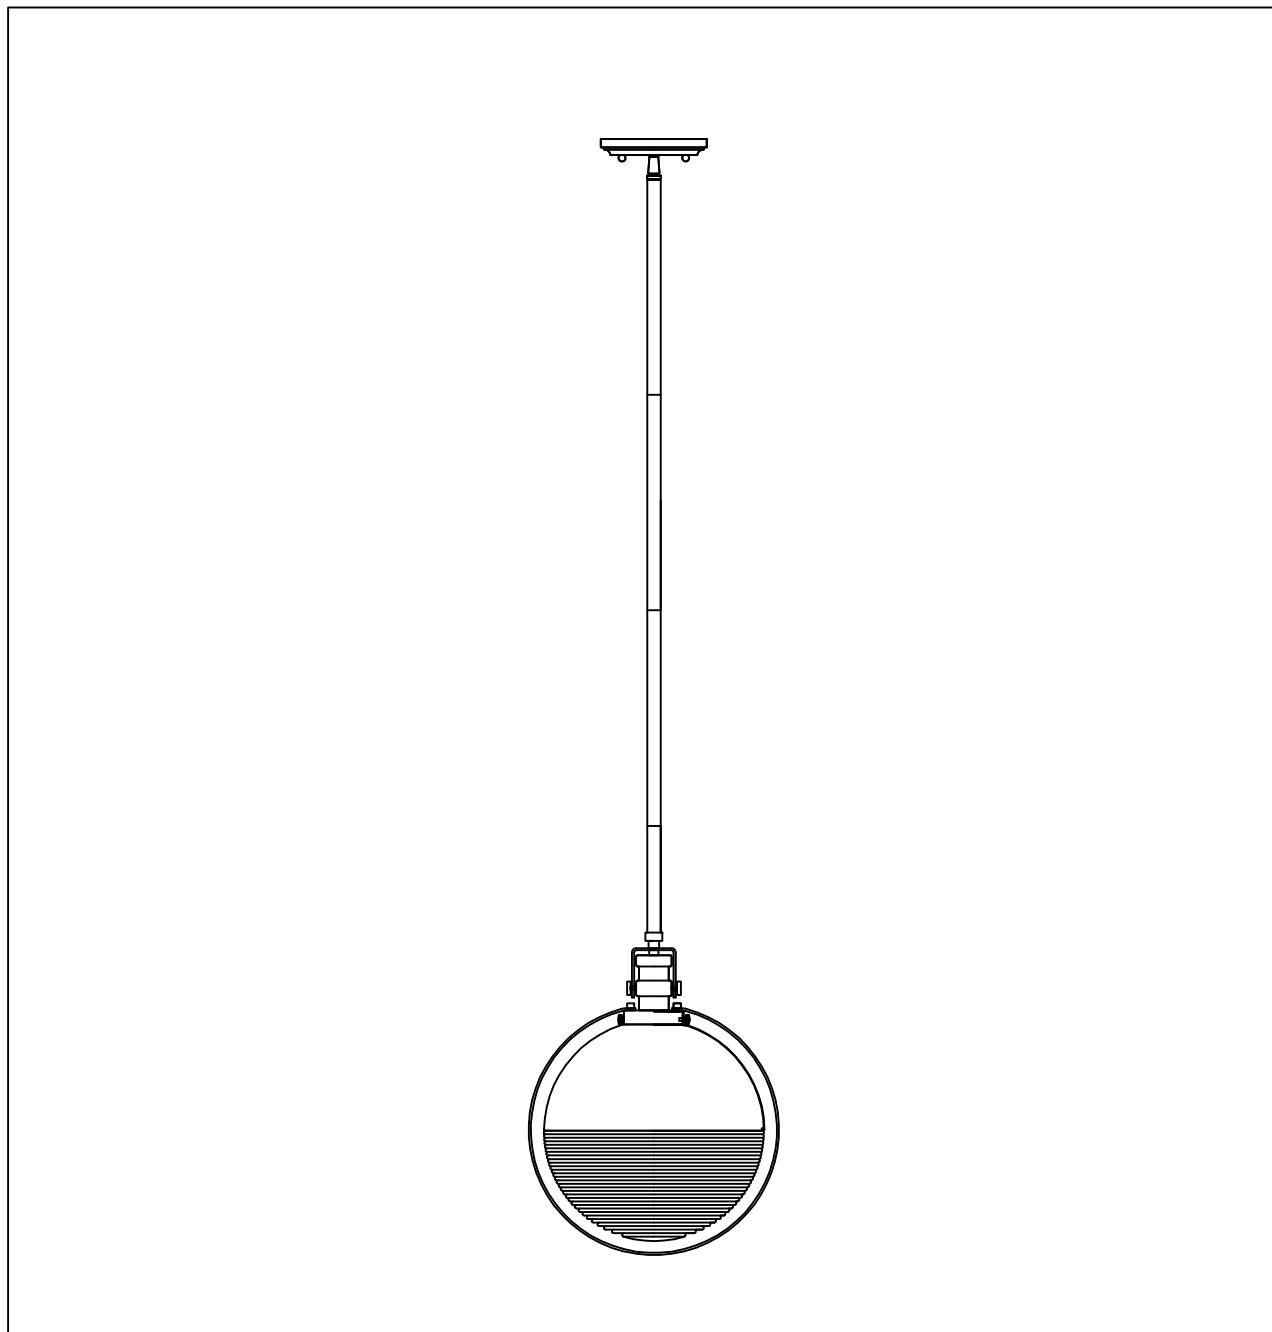


Bulb (included) : 1*MB 9W LED


MADE IN CHINA

Page 1 of (3)

IMPORTANT: Turn off power at the main fuse or circuit breaker box before starting installation

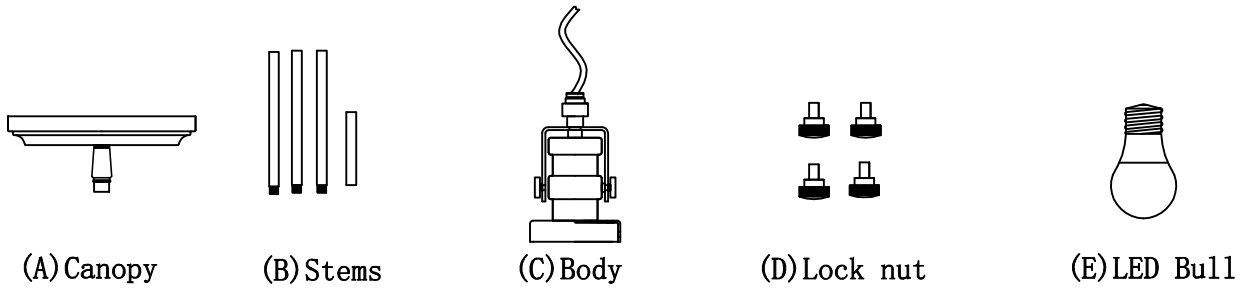


Locate all hardware & components before discarding packaging

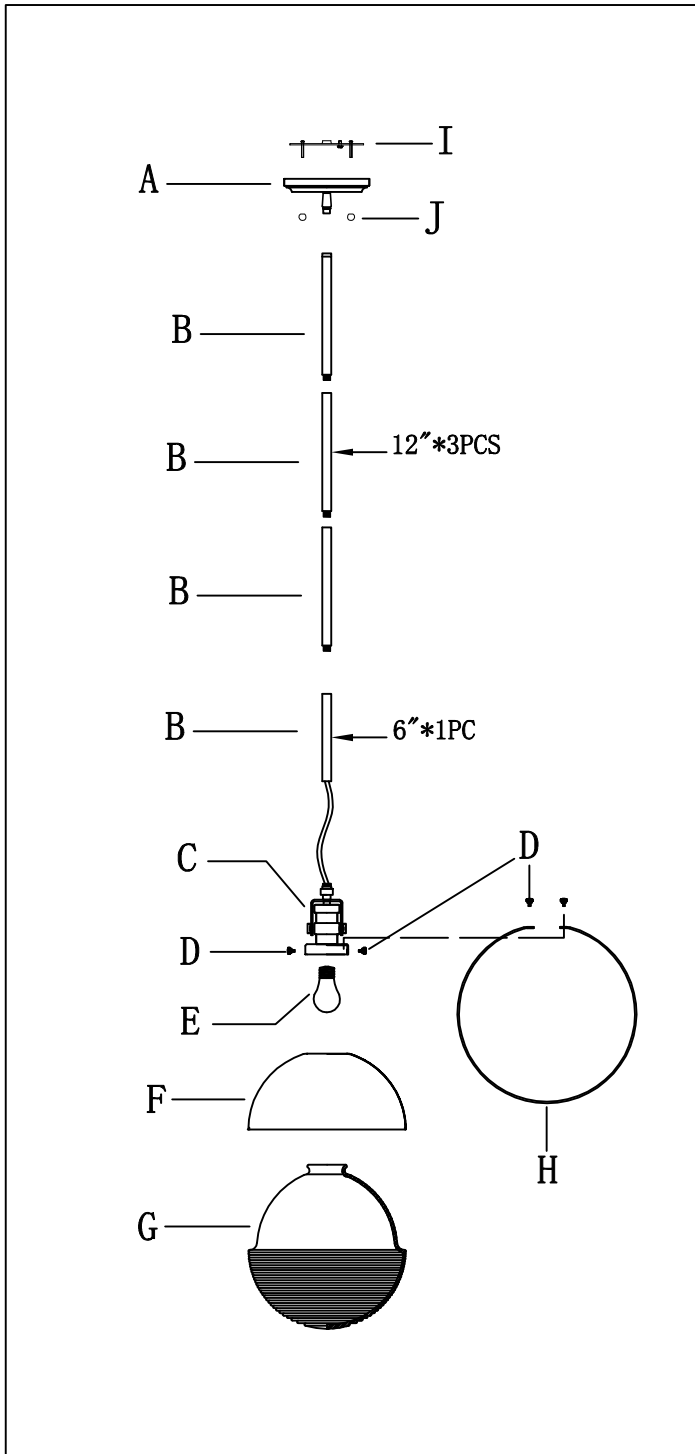


Cleaning & Care:

Clean with soft cloth and a mild detergent.
Do not use abrasive cleaner.

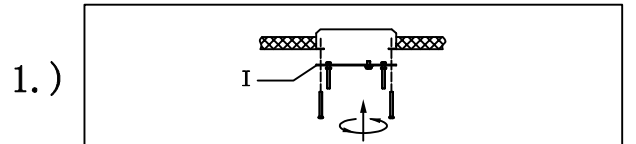


1.)

Step. 1: Remove mounting bracket (I) from fixture and install to electrical box.

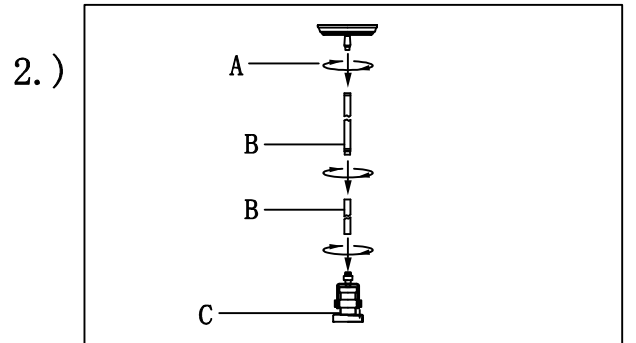


2.)

Step. 2: Run wire through stems (B) and combine stem lengths to meet desired mounting height.

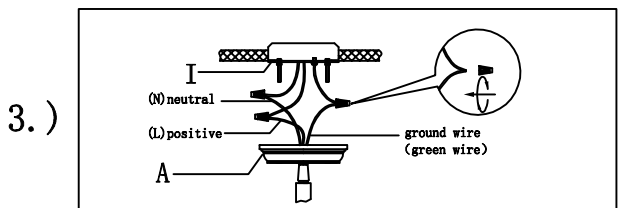

3.)


Step. 3: Wire fixture to wires in outlet box. Copper/Green wire is for Ground.

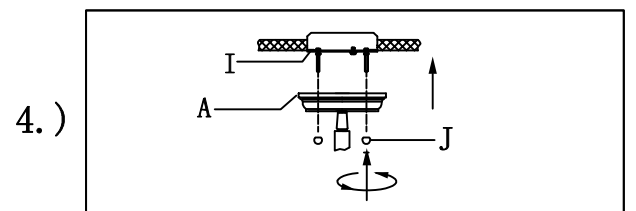


4.)

Step. 4: Install fixture to bracket and tighten ball nuts (J) on the canopy to secure.


IMPORTANT: Turn off power at the main fuse or circuit breaker box before starting installation

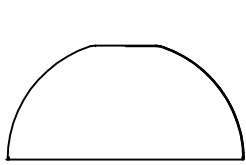

(F) Steel Shade

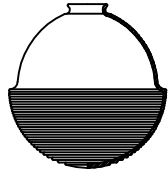

(G) Glass shade

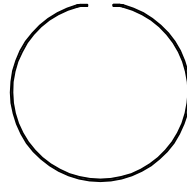

(H) Ring




(I) Bracket



(J) Ball nut


Locate all hardware & components before discarding packaging

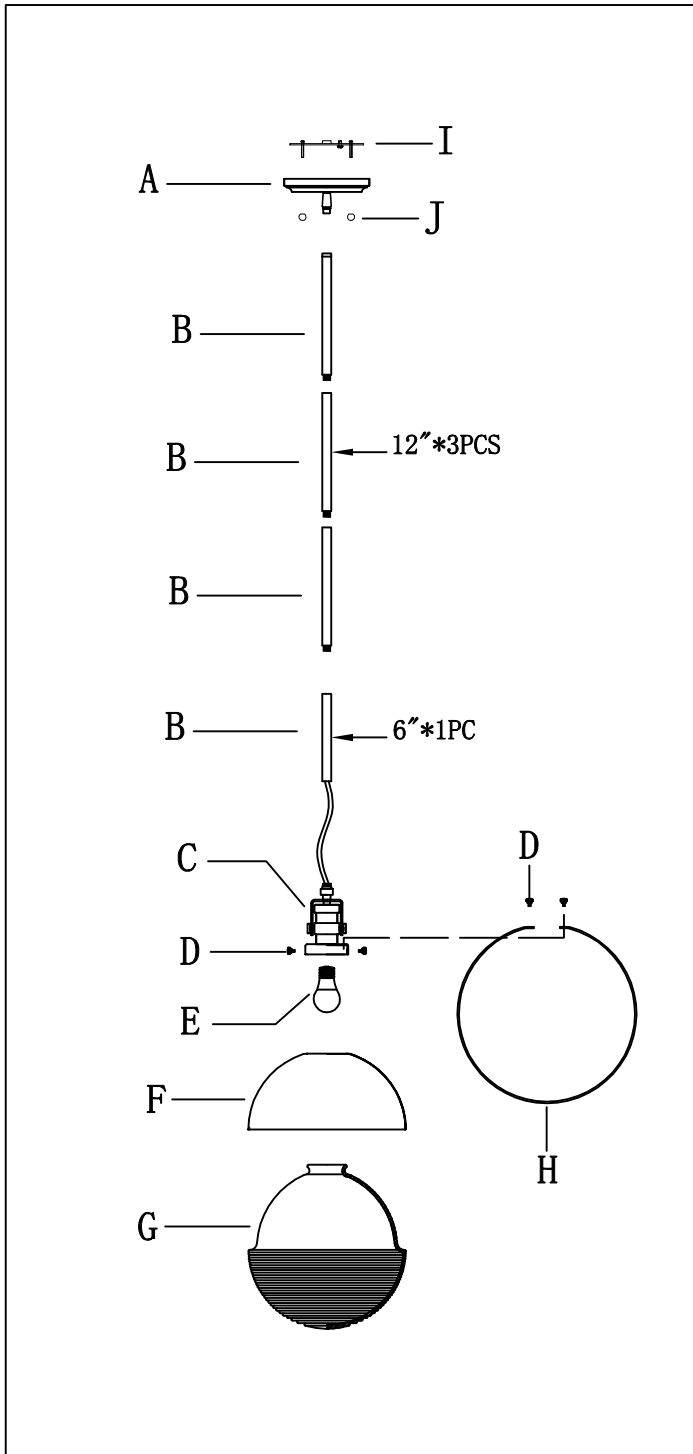

Cleaning & Care:


Clean with soft cloth and a mild detergent.
Do not use abrasive cleaner.

5.)

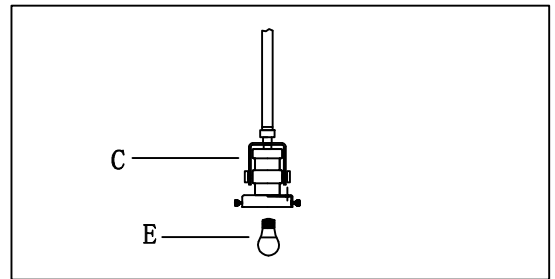


Step. 5: Install the bulb (E)

6.)

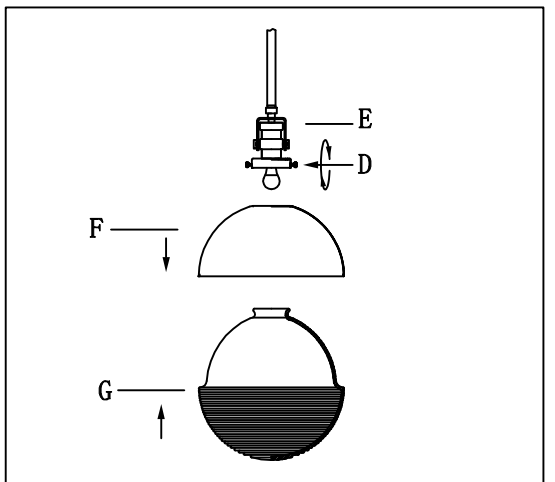

Step. 6: Put steel shade (F) on glass shade (G), then up to install shade on the body (C), and use lock nut (D) to lock the glass shade (G) to secure.

6.)

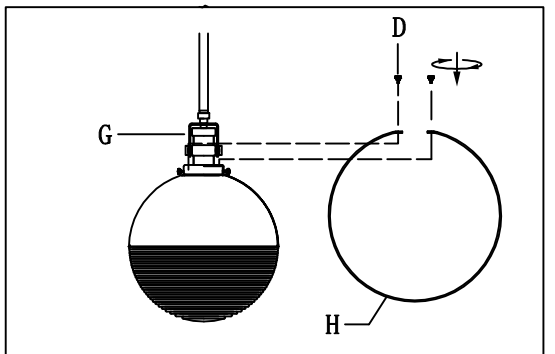

Step. 6: Use the lock nut (D) to lock Ring (H) on body (C) to secure.